

GDX Audio and Video Door Entry

Audio Handset User Guide

Ref. HSAU-LIT-001 V2.0 August 2023



For further assistance and support please refer to your installer or building management contact.

Comelit-PAC Limited

Registered in England and Wales No. 04311885. VAT No. GB 795 645 27

UNITED KINGDOM: Unit 2B The Quad, Butterfield Business Park, Luton, Bedfordshire, LU2 8EF


ITALY: Comelit Group S.p.A., Via Don Arrigoni n° 5, 24020 - Rovetta S. Lorenzo - BG

Copyright 2022 Comelit-PAC Limited


All rights reserved. This document or any portion thereof may not be reproduced or used in any manner whatsoever, without the express written permission of Comelit-PAC Limited



Overview of Audio Handset

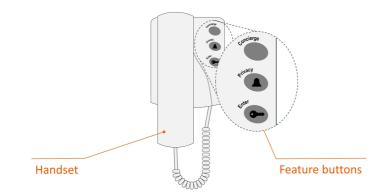

Above image shows video version of 3-button handset

 

Talk to your visitor.

 
Make a Concierge call (if the service is enabled)

Use privacy mode so you are not disturbed.

Open the main door to your building.


Answer a Call

When the handset rings, the **bell** button will light up green.



Press the **Enter** button to open the building door and replace the handset. The enter button will flash for a short period to indicate the door is unlocked.



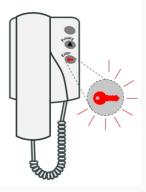



Controls

Button	Description
etitiacy GREEN	Privacy button When your phone is ringing pick up your handset to answer the caller. If the phone is "off the hook" it will not ring.
Privacy UNLIT	Privacy button (Normal state): Stays unlit when privacy is not enabled or there is no current call.
RED	Privacy button When the handset is not in use, press to enable privacy and you will not receive calls. Normal operation is resumed when you next press the button or the privacy time period has elapsed (default is six hours).
UNLIT	Enter button (Normal state): This can only be used during a call and opens the door to allow visitors access to the building.
RED	Enter button If the door is left open the key will remain constant red. You will need to close and lock the door.