



# GDX Audio and Video Door Entry

## Video Handset User Guide

Ref. HSVD-LIT-001 V2.0 August 2023



For further assistance and support please refer to your installer or building management contact.

### **Comelit-PAC Limited**

Registered in England and Wales No. 04311885. VAT No. GB 795 645 27

 
UNITED KINGDOM: Unit 2B The Quad, Butterfield Business Park, Luton, Bedfordshire, LU2 8EF

ITALY: Comelit Group S.p.A., Via Don Arrigoni n° 5, 24020 - Rovetta S. Lorenzo - BG

Copyright 2022 Comelit-PAC Limited

All rights reserved. This document or any portion thereof may not be reproduced or used in any manner whatsoever, without the express written permission of Comelit-PAC Limited

# Overview of Audio Handset

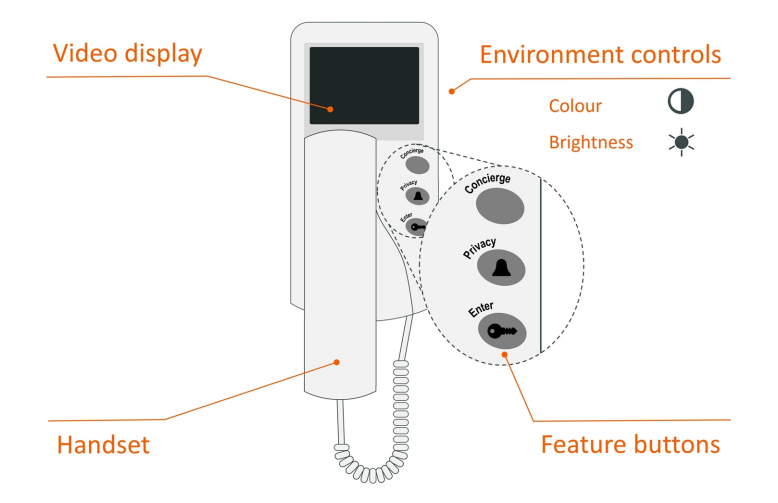


*Above image shows video version of 3-button handset*


With this handset you can:
Talk to your visitor.
Make a Concierge call (if the service is enabled)
Use privacy mode so you are not disturbed.
Open the main door to your building.

## Answer a Call

  
When the handset rings, the **bell** button will light up green.

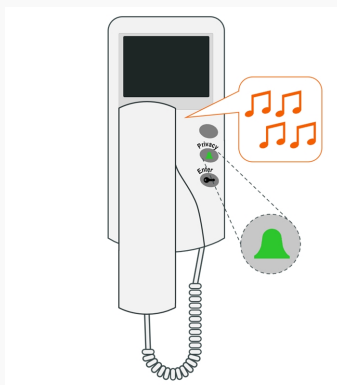



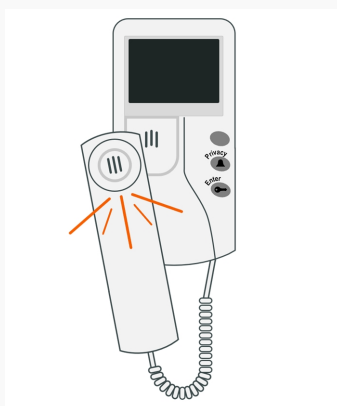

 
Lift the handset to talk to your caller.

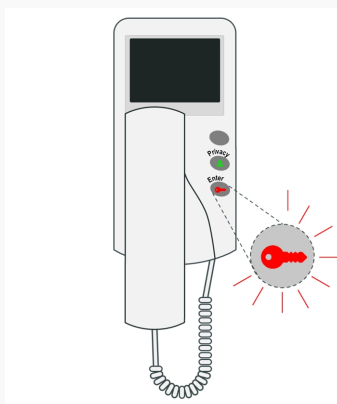

Press the **Enter** button to open the building door and replace the handset. The enter button will flash for a short period to indicate the door is unlocked.



# Controls

Button	Description
<div><div>Privacy</div><div></div><div>GREEN</div></div>	<p><b>Privacy button</b></p> <p>When your phone is ringing pick up your handset to answer the caller.</p> <p><b>If the phone is "off the hook" it will not ring.</b></p>
<div><div>Privacy</div><div></div><div>UNLIT</div></div>	<p><b>Privacy button</b> (Normal state):</p> <p>Stays unlit when privacy is not enabled or there is no current call.</p>
<div><div>Privacy</div><div></div><div>RED</div></div>	<p><b>Privacy button</b></p> <p>When the handset is not in use, press to enable privacy and you will not receive calls.</p> <p>Normal operation is resumed when you next press the button or the privacy time period has elapsed (default is six hours).</p>
<div><div>Enter</div><div></div><div>UNLIT</div></div>	<p><b>Enter button</b> (Normal state):</p> <p>This can only be used during a call and opens the door to allow visitors access to the building.</p>
<div><div>Enter</div><div></div><div>RED</div></div>	<p><b>Enter button</b></p> <p>If the door is left open the key will remain constant red.</p> <p>You will need to close and lock the door.</p>