

IP Modem/Router

P/N: PAC-MGT-MD-IP-KT Doc ref: PAC-MGT-MD-IP-KT_LIT_SG

Setup Guide Issue 1.0 Mar 2023



Technical Support	pacgdxsupport@comelit-pac.co.uk T: +44 (0)161 406 3400 — Option 2
Training	pacgdxcustomerservice@comelit-pac.co.uk T: +44 (0)161 406 3400 — Option 1





Power on Modem/Router

- 1. Connect the Network (RJ45) lead from the Modem/Router to the controller.
- 2. Apply power to the Modem/Router from the **CONTROLLER.**



3. Wait for Modem/Router LEDs to indicate a stable mobile connection.



- 4. Recycle power to the CONTROLLER.
- 5. Check the network port LEDs of the controller show traffic activity.








LED Statuses



Network type LEDs

Signal strength LEDS

The table below shows the description of the LED combinations:

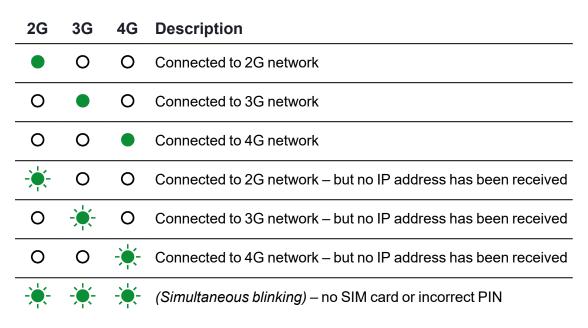



(LEDs blink in repeating sequence)- attempting to find network








Safety Information

The PAC-MGT-MD-IP-KT range must be used in compliance with all applicable national and international laws and with any special restrictions regulating the utilisation of the communication module in prescribed applications and environments.

SIM Replacement

1. Unscrew the two back panel hex bolts and remove the back panel.

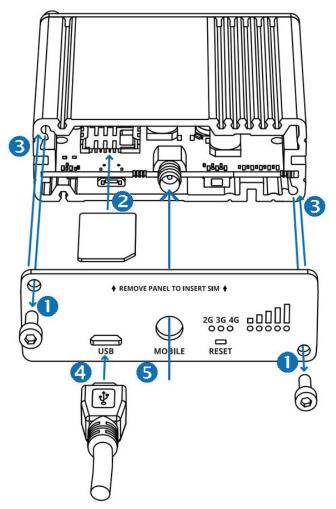

- 2. Insert your SIM card into the SIM socket.
- 3. Attach the panel and tighten the hex bolts.
- 4. Connect the power adapter and plug into an AC mains outlet.
- 5. Attach the mobile antenna (max torque 0.4 $N \cdot m$ / 3.5 lbf \cdot in).
- 6. Check for a confirmed connection in Housing Central Hardware page. The "State" column will show 3 × green 'lights' for the Modem/Router.

